



RS232 Control of Meridian products

My system is using 3rd party control (e.g. AMX, Crestron, other), why is my Meridian product power-cycling?

During start-up of Meridian products they must be allowed to fully initialise prior to sending any commands via the Control system.

How do I trouble-shoot the Meridian product or 3rd party control system?

Remove the RS232 to the Meridian product. If removing the RS232 feed resolves the issue the Third party control system should be checked.